

Figure 1 : Wiring Diagram of Breakglass to Fire Alarm Control Panel

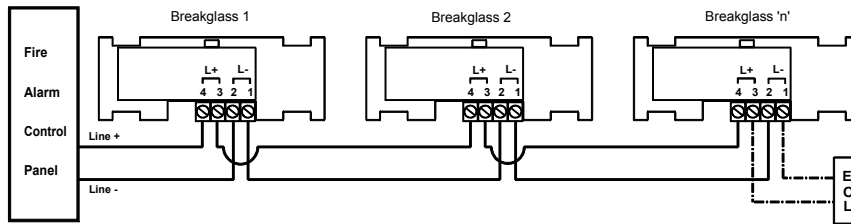


Figure 2 : To "TEST" and to "RESET" Breakglass/Call Point


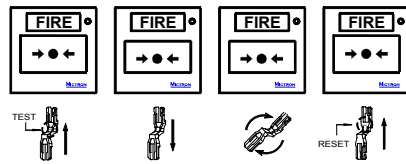


Figure 3 : Breakglass Dimensions (mm)

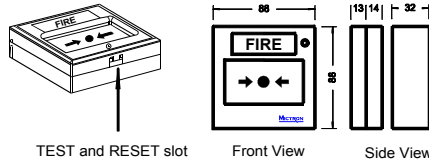

Safety Precautions during Installation and Testing

- 1) To install breakglass, refer to Figure 4
 - Step 1) Mount Back Box (D) to wall.
 - Step 2) Fix Centre Piece (C) to (D).
 - Step 3) Install Glass (B) to (C).
 - Step 4) Fix Front Cover(A) to (C).
- 2) To ACTIVATE breakglass, press the glass until it breaks.
- 3) To ACTIVATE call point, press/push the glass.
- 4) To TEST breakglass/call point activation (Figure 2), insert the special tool with "TEST" position into the slot at bottom. Rotate the tool to "RESET" position for resetting.

Figure 4 : Sectional View of Breakglass

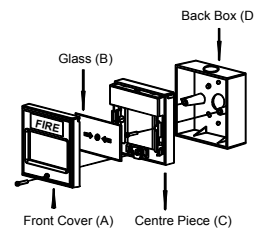


Figure 1 : Wiring Diagram of Breakglass to Fire Alarm Control Panel

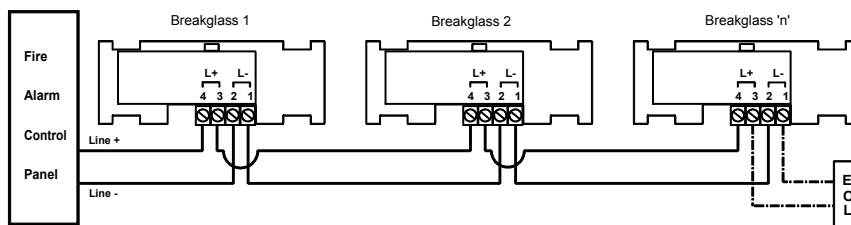


Figure 2 : To "TEST" and to "RESET" Breakglass/Call Point


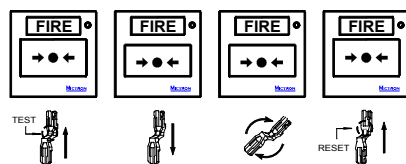


Figure 3 : Breakglass Dimensions (mm)

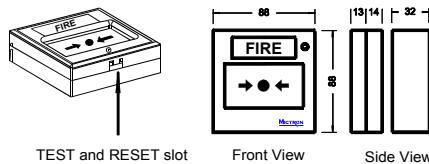

Safety Precautions during Installation and Testing

- 1) To install breakglass, refer to Figure 4
 - Step 1) Mount Back Box (D) to wall.
 - Step 2) Fix Centre Piece (C) to (D).
 - Step 3) Install Glass (B) to (C).
 - Step 4) Fix Front Cover(A) to (C).
- 2) To ACTIVATE breakglass, press the glass until it breaks.
- 3) To ACTIVATE call point, press/push the glass.
- 4) To TEST breakglass/call point activation (Figure 2), insert the special tool with "TEST" position into the slot at bottom. Rotate the tool to "RESET" position for resetting.

Figure 4 : Sectional View of Breakglass

